



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol+ Tv		Vol+
	Power Tv		Shift + Power		Dubbing		Setup / OPT /
	DVD		Shift + 2		0		0
	HDD		Shift + 7		AV/Input		AV / Input / RDS
	Open/Close		Eject / Surround		Vol- Tv		Vol-
	Av/Input Tv		Shift + AV / Input / RDS		<< Scan		<< / Tune-
	1		1		Scan >>		>> / Tune+
	2		2		I<< Skip		I<< / Preset-
	3		3		Skip >>I		>>I / Preset+
	PR/CH+ Tv		Shift + CH+ /		Pause/Step		Pause / Step / Freeze
	4		4		Play		Play / Slow
	5		5		Stop		Stop / Hold
	6		6		Home		Menu / Home
	PR/CH- Tv		Shift + CH- /		Up		Up
	7		7		PR/CH+		CH+ / Page+
	8		8		Menu/List		D.Menu / Top
	9		9		Menu/List		Smart / List





Originale	Sostituto
Left	Left
Enter	OK
Right	Right
Display	Display / Media
Down	Down
PR/CH-	CH- / Page-
Return	Back / Return
Timeshift	Info / Angle
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
CHP.ADD	Text / Goto
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Title	Sound / Title
Thumbnail	Picture / Format
Zoom	Zoom / Size
Marker	Fav / Marker / PC

Originale	Sostituto
Search	Red / Netflix / Search
Clear	Exit / Cancel / Clear
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Tv/DVD	TV/Radio /
*	Guide / EPG / -/-

