



Originale	Sostituto
 Power	 Power
 D/A Input	 Smart
 Tv/Radio	 TV/R
 Input	 AV
 Bright+	 Shift + Right
 Bright-	 Shift + Left
 Simplink	 Media
 Text	 Text
 Ratio	 Format
 I/II	 Dual
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Stop	 Stop
 Play	 Play
 Pause	 Pause

Originale	Sostituto
 Rec	 Rec
 I<<	 I<<
 <<	 <<
 >>	 >>
 >>I	 >>I
 Exit	 Exit
 Back	 Back
 Menu	 Menu
 Info	 Info
 Guide	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -







Originale		Sostituto		Originale		Sostituto	
	Power		Power		4		4
	Stop		Stop		5		5
	Play		Play		6		6
	Pause		Pause		7		7
	I<<		I<<		8		8
	<<		<<		9		9
	>>		>>		0		0
	>>I		>>I				
	Menu		Menu				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	1		1				
	2		2				
	3		3				



