 







 



















 

 





 



 

 







 



 

 

 

 

 
 



 




Originale	Sostituto
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 O)/I-II/Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear

Originale	Sostituto
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH+	 CH+ / Page+
 Index	 Display / Media
 Vol+	 Vol+
 CH-	 CH- / Page-
 List	 Smart / List
 Vol-	 Vol-
 ♥	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 <<	 << / Tune-





Originale	Sostituto
Green	Green / APP / Repeat
>>	>> / Tune+
Yellow	Yellow / YouTube / Repeat
I<<	I<< / Preset-
Blue	Blue / Prime Video / Random
>>I	>>I / Preset+
[≡]	Text / Goto
Play	Play / Slow
Pause	Pause / Step / Freeze
[≡+]	Shift + Stop /
Stop/Still	Stop / Hold
Radio	TV/Radio /
[≡◆]/[++]	Zoom / Size
[≡x]	D.Menu / Top
[≡o]/Subtitle	Subtitle / EQ
DMP	Setup / OPT /
Rec	Rec / Rec Mode

Originale	Sostituto

