


 







| Originale | Sostituto |
|--|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  DTV |  Shift + 1 |
|  Radio |  TV/Radio / |
|  USB |  Shift + 8 |
|  DVD |  Shift + 2 |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  TV Guide |  Guide / EPG / -/-- |
|  0 |  0 |

| Originale | Sostituto |
|--|---|
|  Recall |  Back / Return |
|  Vol + |  Vol+ |
|  P.Mode |  Picture / Format |
|  CH + |  CH+ / Page+ |
|  Vol - |  Vol- |
|  S.Mode |  Sound / Title |
|  CH - |  CH- / Page- |
|  FAV |  Fav / Marker / PC |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Exit |  Exit / Cancel / Clear |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Source |  AV / Input / RDS |
|  Down |  Down |
|  Info |  Info / Angle |





| Originale | Sostituto |
|----------------------|--------------------------|
| Aspect | Shift + Picture / Format |
| Sleep | Sleep / Timer |
| Audio | Audio / Lang I/II |
| Subtitle | Subtitle / EQ |
| Text | Text / Goto |
| Text Hold | Shift + Stop / |
| Text/DVD Zoom | Zoom / Size |
| Display Power | Display / Media |
| Display Power | Shift + Power |
| Rec / DVD Menu | D.Menu / Top |
| Rec / DVD Menu | Rec / Rec Mode |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| Stop / Open/Close | Eject / Surround |
| Stop / Open/Close | Stop / Hold |
| Rec List / DVD Setup | Smart / List |
| Rec List / DVD Setup | Setup / OPT / |

| Originale | Sostituto |
|------------------|-----------------------------|
| << | << / Tune- |
| >> | >> / Tune+ |
| Play / Pause | Play / Slow |
| Play / Pause | Pause / Step / Freeze |
| Red / Goto | Red / Netflix / Search |
| Green / A-B | Green / APP / Repeat |
| Yellow / Angle / | Yellow / YouTube / Repeat |
| Blue / Repeat | Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

