



 



 

 






 



 
 








	Originale	Sostituto	Originale	Sostituto
	Power			 1
	Mute			 2
	Tv/AV			 3
	Multimedia			 4
	I/II			 5
	List			 6
	ARC			 7
	Menu			 8
	PR+			 9
	PR-			 0
	Up			 Guide
	Down			 Pre Ch
	Right			 Eject
	Left			 3D
	OK			 Sleep
	Vol+			 TV/R
	Vol-			 Text



