

 
 




 


 

 



 

 

 

 

 


 
 

 
 
 


 
 



 


 


 
 
 
 
 

 
 
 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Red	 Red
 1	 1	 Green	 Green
 2	 2	 Yellow	 Yellow
 3	 3	 Blue	 Blue
 4	 4	 Guide	 Guide
 5	 5	 Rec List	 List
 6	 6	 Input	 AV
 7	 7	 *	 Menu
 8	 8	 Up	 Up
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 [i+]	 Info	 Left	 Left
 [≡]	 Text	 OK	 Ok
 Google Play	 Shift + Media	 Back	 Back
 Netflix	 Media	 TV	 TV/R

Non funzione di controllo vocale.





Originale		Sostituto		Originale		Sostituto	
	Home		Smart		Exit		Exit
	Vol+		Vol +				
	Vol-		Vol -				
	Recall		Pre Ch				
	Mute		Mute				
	CH+		Ch +				
	CH-		Ch -				
	Audio		Dual				
	[...]		Subt				
	Help		D. Menu				
	<<		<<				
	Play		Play				
	>>		>>				
	Rec		Rec				
	Pause		Pause				

Non funzione di controllo vocale.

