




 



 


 

 
 


 
 

 







 



 






 
 
 

 




 
 


 
 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 USB	 AV
 Mute	 Mute	 Menu	 Menu
 1	 1	 EPG	 Guide
 2	 2	 Exit	 Exit
 3	 3	 Goto	 Smart
 4	 4	 Play	 Play
 5	 5	 Pause	 Pause
 6	 6	 <<	 <<
 7	 7	 >>	 >>
 8	 8	 Rec	 Rec
 9	 9	 Stop	 Stop
 0	 0	 UP	 Up
 Info	 Info	 Down	 Down
 FAV	 Pre Ch	 Right	 Right
 Page+	 >>	 Left	 Left
 Page-	 <<	 OK	 Ok
 Audio	 Dual	 CH+	 Ch +

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 PLAY	 STOP
 <<	 <<	 >>	 >>
 LIST	 DUAL	 SUBT	 OPT
 SLEEP	 TV/R	 FORMAT	 3D
 D.MENU	 TEXT	 UP	 AV
 MENU	 INFO	 OK	 BACK
 EXIT	 SMART	 +	 +
 -	 MEDIA	 -	 -
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 GUIDE	 0	 PRE-CH	
 A	 B	 C	 D
			
www.mandis.tv			





Originale	Sostituto	Originale	Sostituto
 CH-	 Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		
 TV/Radio	 TV/R		
 Teletext	 Text		
 Subtitle	 Subt		
 Recall	 Back		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

Originale	Sostituto

