 


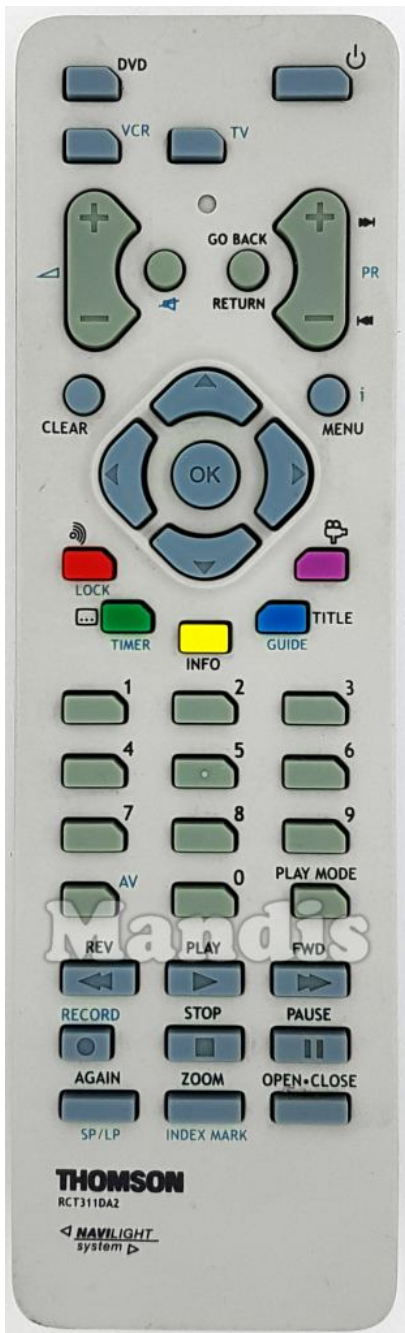

Originale	Sostituto
Power	Power
DVD	Media
VCR	Smart
TV	TV/R
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Go Back/Return	Back
>>I	>>I
I<<	I<<
Clear	Exit
Menu/i	Menu
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok

Originale	Sostituto
Red/(·)/Lock	Red
Green/Timer/[...]	Green
Yellow/Info	Yellow
Blue/Guide	Blue
Violet/Camera	Pre Ch
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
AV	AV
Play Mode	Shift + Play






 


Originale	Sostituto	Originale	Sostituto
	<<		<<
	Play		Play
	>>		>>
	Record		Rec
	Stop		Stop
	Pause		Pause
	Again/SP/LP		Options
	Zoom/Index		Info
	Open/Close		Eject

Originale	Sostituto





Originale	Sostituto
 Power	 Power
 DVD	 Media
 VCR	 Smart
 TV	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Go Back/Return	 Back
 PR+	 Ch +
 PR-	 Ch -
 Clear	 Exit
 Menu/i	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok

 
Originale	Sostituto
 Red/(·)/Lock	 Red
 Green/Timer/[...]	 Green
 Yellow/Info	 Yellow
 Blue/Guide	 Blue
 Violet/Camera	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV
 Play Mode	 Shift + Play




 

 
 


 
 

 

 


 
 


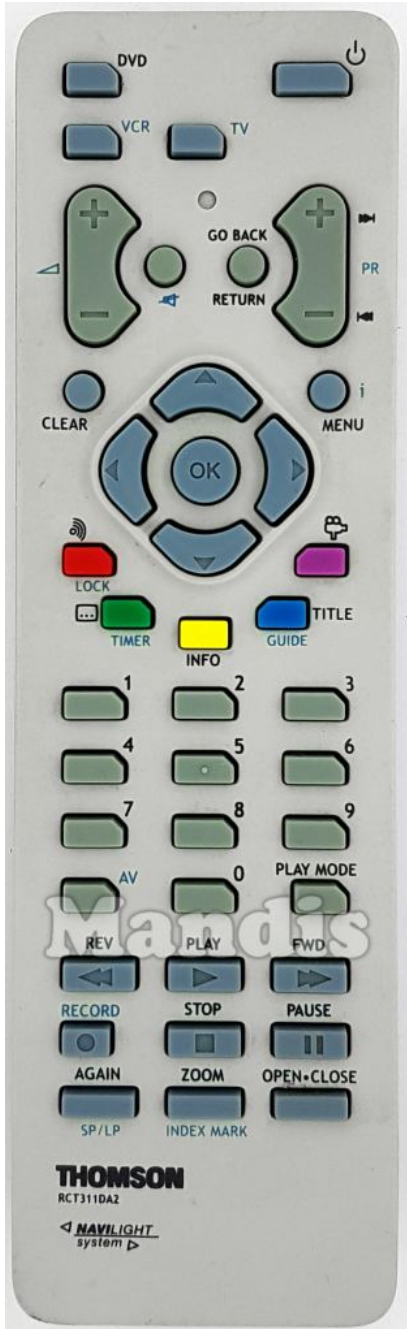

 


 







Originale		Sostituto		Originale		Sostituto	
	<<		<<				
	Play		Play				
	>>		>>				
	Record		Rec				
	Stop		Stop				
	Pause		Pause				
	Again/SP/LP		Options				
	Zoom/Index		Info				
	Open/Close		Eject				

 




Originale	Sostituto	Originale	Sostituto
	Power		Power
	DVD		Media
	VCR		Smart
	TV		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Go Back/Return		Back
	PR+		Ch +
	PR-		Ch -
	Clear		Exit
	Menu/i		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

Originale	Sostituto	Originale	Sostituto
	Red/(·)/Lock		Red
	Green/Timer/[...]		Green
	Yellow/Info		Yellow
	Blue/Guide		Blue
	Violet/Camera		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	<<		<<



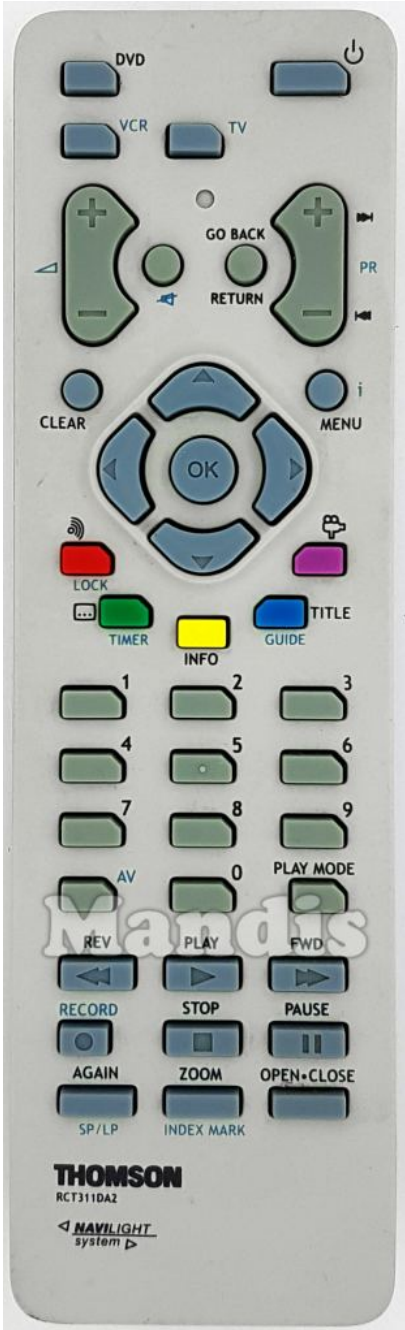

Originale		Sostituto	
	Play		Play
	>>		>>
	Record		Rec
	Stop		Stop
	Pause		Pause

Originale		Sostituto	

