




 

 



 



 

 

 
 

 

 

 

 
 











 

 





 



Originale	Sostituto
 Power	 Power
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Dual
 Display	 Info
 Repeat	 Text
 Zoom	 Shift + Eject
 Top Menu	 Shift + Menu

Originale	Sostituto
 Top Menu	 D. Menu
 Menu List	 Menu
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 Clear	 Exit
 Return	 Back
 I<< Skip	 I<<
 << Rev	 <<
 Fwd >>	 >>
 Skip >>I	 >>I
 Pause	 Pause
 T-Set	 List
 Play	 Play
 1.3x / 0.8x Play	 Shift + Play






 

 

 

 









 







 

 






Originale	Sostituto	Originale	Sostituto
 Stop	 Stop		
 Instant Skip	 Vol +		
 Timer Prog	 Vol -		
 VCR	 Shift + AV		
 DVD	 AV		
 Setup	 Options		
 Rec Mode	 Shift + Rec		
 DVD Rec	 Rec		
 Dubbing	 Smart		

Originale	Sostituto





Originale	Sostituto
 Power	 Power
 Open / Close	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Prog +	 Ch +
 Prog -	 Ch -
 Audio	 Dual
 Display	 Info
 Clear	 Shift + Exit

Originale	Sostituto
 << Rev	 <<
 Fwd >>	 >>
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 VCR	 Shift + AV
 DVD	 AV
 Rec Mode	 Shift + Rec
 VCR Rec	 Rec
 Slow I>	 Shift + >>
 Search	 TV/R
 System	 Menu

