





 


 












 
 


















 





 












Originale	Sostituto
 Power	 Power
 DTV / ATV	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 - / +	 Shift + Guide
 Recall	 Back
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Aspect	 Format

Originale	Sostituto
 Still	 Pause
 P -	 Ch -
 P +	 Ch +
 V -	 Vol -
 V +	 Vol +
 Sleep	 Sleep
 Mute	 Mute
 MTS	 Shift + Media
 Menu	 Menu
 Source	 AV
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 Exit	 Exit
 i	 Info



