 









 

 



























 





 





 


















Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 TV / Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Left	 Left
 EPG	 Guide / EPG / -/--	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Record	 Rec / Rec Mode
 6	 6	 Down	 Down
 Audio	 Audio / Lang I/II	 Stop	 Stop / Hold
 7	 7	 Vol +	 Vol+
 8	 8	 CH +	 CH+ / Page+
 9	 9	 Vol -	 Vol-
 Subtitle	 Subtitle / EQ	 TTX	 Text / Goto
 Info	 Info / Angle	 FAV	 Fav / Marker / PC
 0	 0	 CH -	 CH- / Page-
 Recall	 Back / Return	 Media	 Display / Media

Originale	Sostituto	Originale	Sostituto
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 HOME
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 RETURN	 EXIT	 BACK
 CANCEL	 LIST	 SMART	 CH PAGE
 VOL +	 MEDIA	 DISPLAY	 TV
 VOL -	 D.VD	 CD - STB	 VIDEO
 1	 TAPE	 TUNER	 AUX - HDD
 2	 USB	 BLUETOOTH	 VIDEO
 3	 HDMI - BAT	 PC	 AUX - HDD
 4	 GUIDE EPG	 FAV MARKER	 AUX - HDD
 5	 NETFLIX	 APP	 AUX - HDD
6	YouTube	Prime Video	AUX - HDD
7	SEARCH	REPEAT	AUX - HDD
8	REPEAT A-B	RANDOM	AUX - HDD
9	Mandis SHOP	www.mandis.tv	AUX - HDD



