




 





Originale	Sostituto
 Power	 Power
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Guide	 Guide / EPG / -/--
 0	 0
 Infos	 Info / Angle
 Vol +	 Vol+
 Mute	 Mute / Dimmer
 Prog +	 CH+ / Page+

Originale	Sostituto
 Vol -	 Vol-
 Format	 Picture / Format
 Prog -	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Media	 Display / Media
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 AD	 Audio / Lang I/II




**Originale**                      **Sostituto**

	Subtitles		Subtitle / EQ
	Text		Text / Goto
	Radio		TV/Radio /
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>		>>  / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze

**Originale**                      **Sostituto**