

 










 





 







 







 























































Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 16:9 / Wide	 Picture / Format	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol +	 Vol+
 4	 4	 Menu	 Menu / Home
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 7	 7	 Source	 AV / Input / RDS
 8	 8	 CH -	 CH- / Page-
 9	 9	 Info	 Info / Angle
 0	 0	 Sleep	 Sleep / Timer
 F1	 Exit / Cancel / Clear	 Recall	 Back / Return
 [:≡]	 D.Menu / Top	 L / R	 Eject / Surround
 Smart S	 Sound / Title	 Index / Play	 Play / Slow
 Smart P	 Shift + Picture / Format	 Index / Play	 Display / Media

Originale	Sostituto	Originale	Sostituto
 Up	 Up	 TV	 DVD
 Left	 Left	 SAT	 AUX
 OK	 OK	 SLOW	 STEP - FREEZE
 Right	 Right	 HOLD	 REC MODE
 Down	 Down	 TUNE-	 TUNE+
 Vol +	 Vol+	 PRESET-	 PRESET+
 Menu	 Menu / Home	 EQ	 SURROUND
 CH +	 CH+ / Page+	 TITLE	 LANG VUI
 Vol -	 Vol-	 EQ	 SUBTITLE
 Source	 AV / Input / RDS	 SOUND	 AUDIO
 CH -	 CH- / Page-	 FORMAT	 SIZE
 Info	 Info / Angle	 PICTURE	 ZOOM
 Sleep	 Sleep / Timer	 SLEEP	 TIMER
 Recall	 Back / Return	 TOP MENU	 OPT-TOOLS
 L / R	 Eject / Surround	 GOTO	 RDS
 Index / Play	 Play / Slow	 D.MENU	 SETUP
 Index / Play	 Display / Media	 TEXT	 AV INPUT





Originale	Sostituto
Zoom / Pause	Zoom / Size
Zoom / Pause	Pause / Step / Freeze
Reveal / Stop	Stop / Hold
Reveal / Stop	Setup / OPT /
TTX	Text / Goto
Hold / I<<	I<< / Preset-
Hold / I<<	Shift + Stop /
List / >>I	>>I / Preset+
List / >>I	Smart / List
Language / <<	<< / Tune-
Language / <<	Audio / Lang I/II
Save / >>	>> / Tune+
Save / >>	Shift + Rec / Rec Mode
Red / Radio / Rec	Rec / Rec Mode
Red / Radio	Red / Netflix / Search
Red / Radio / Rec	TV/Radio /
Green / Subtitle	Subtitle / EQ

Originale	Sostituto
Green / Subtitle	Green / APP / Repeat
Yellow / Fav	Fav / Marker / PC
Yellow / Fav	Yellow / YouTube / Repeat
Blue / EPG	Guide / EPG / -/-
Blue / EPG	Blue / Prime Video / Random

