

 

 

 

 

 

 

 

 
 
 
 



 
 

 

 

 



Originale	Sostituto
Power	Power
Audio I/II	Dual
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Sleep	Sleep
Recall	Back
Exit	Exit
Menu	Menu

Originale	Sostituto
Source	AV
Info	Info
Up	Up
Right	Right
Down	Down
Left	Left
OK	Ok
Vol +	Vol +
Vol -	Vol -
CH +	Ch +
CH -	Ch -
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
P.Mode	Format
S.Mode	Shift + Dual





Originale		Sostituto		Originale	Sostituto
	P.Size		Eject		
	Subtitle		Subt		
	Play/Pause / TS		Play		
	Play/Pause / TS		Pause		
	Stop		Stop		
	Rec		Rec		
	Text		Text		
	<< / PVR List		<<		
	<< / PVR List		List		
	>> / DTV/Radio		>>		
	>> / DTV/Radio		TV/R		
	I<< / Fav.CH		I<<		
	I<< / Fav.CH		Pre Ch		
	>>I / Guide		>>I		
	>>I / Guide		Guide		

