


 




































 



 











 















Originale		Sostituto		Originale		Sostituto	
	Power		Power		Left		Left
	Red		Red / Netflix / Search		Up		Up
	Green		Green / APP / Repeat		Right		Right
	Yellow		Yellow / YouTube / Repeat		P +		CH+ / Page+
	Blue		Blue / Prime Video / Random		OK		OK
	<<		<< / Tune-		P -		CH- / Page-
	Play		Play / Slow		Down		Down
	>>		>> / Tune+		P < P		Smart / List
	<		<< / Preset-		Back		Back / Return
	Pause		Pause / Step / Freeze		Guide		Guide / EPG / -/--
	>		>> / Preset+		1		1
	Info		Info / Angle		2		2
	Stop		Stop / Hold		3		3
	Rec		Rec / Rec Mode		4		4
	Titles		Subtitle / EQ		5		5
	Exit		Exit / Cancel / Clear		6		6
	Menu		Menu / Home		7		7




Originale
Sostituto

	8		8
	9		9
	0		0
	PVR		Display / Media
	Page Up	+	Shift + CH+ /
	Page Down	+	Shift + CH- /

Originale
Sostituto

