





 





 



 





 



 





 

 

 

 

 



 



 

 
 


 
 


 





 







Originale	Sostituto
	 Mute / Dimmer
	 Power
	 Display / Media
	 Guide / EPG / -/--
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Zoom / Size
	 0
	 AV / Input / RDS

Originale	Sostituto
	 Setup / OPT /
	 Picture / Format
	 TV/Radio /
	 Smart / List
	 Rec / Rec Mode
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Red / Netflix / Search
	 Up
	 Blue / Prime Video / Random
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Info / Angle
	 Down
	 << / Tune-







 

 

 

 

 

 

 

 

 

 

 



 







 

 

 

 

 



 


 
 

 

 

 
 




 





Originale	Sostituto	Originale	Sostituto
	 Stop / Hold		
	 Play / Slow		
	 Pause / Step / Freeze		
	 >> / Tune+		
	 CH- / Page-		
	 CH+ / Page+		
	 Vol-		
	 Vol+		
	 Text / Goto		
	 Shift + Pause / Step /		
	 Sound / Title		
	 D.Menu / Top		
	 Menu / Home		
	 Shift + 0		







Originale	Sostituto
	 Mute / Dimmer
	 Power
	 Fav / Marker / PC
	 Smart / List
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
 Aspect / Zoom	 Zoom / Size
 0 / AV	 0
 0 / AV	 AV / Input / RDS

Originale	Sostituto
	 Setup / OPT /
	 Display / Media
	 TV/Radio /
	 D.Menu / Top
	 Rec / Rec Mode
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Red / Netflix / Search
	 Up
	 Blue / Prime Video / Random
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Info / Angle
	 Down
	 << / Tune-











 





 



 





 



 





 

Originale	Sostituto
	 Stop / Hold
	 Play / Slow
	 >> / Tune+
	 CH- / Page-
	 CH+ / Page+
	 Vol-
	 Vol+
	 Text / Goto
	 Pause / Step / Freeze
	 Sound / Title
	 Picture / Format
	 Menu / Home
	 +  Shift + 0

 

 

 

 



 



 

 
 


 
 


 





 



Originale	Sostituto





 







 



 



 
 

 
 
 

 



 
 
 


Originale	Sostituto
	 Mute / Dimmer
	 Power
	 Display / Media
	 Guide / EPG / -/--
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Zoom / Size
	 0
	 AV / Input / RDS

Originale	Sostituto
	 Setup / OPT /
	 Picture / Format
	 TV/Radio /
	 Smart / List
	 Rec / Rec Mode
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Red / Netflix / Search
	 Up
	 Blue / Prime Video / Random
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Info / Angle
	 Down
	 << / Tune-





Originale	Sostituto
	 Stop / Hold
	 Play / Slow
	 Pause / Step / Freeze
	 >> / Tune+
	 CH- / Page-
	 CH+ / Page+
	 Vol-
	 Vol+
	 Text / Goto
	 +  Shift + Pause / Step /
	 Sound / Title
	 D.Menu / Top
	 Menu / Home
	 +  Shift + 0

Originale	Sostituto

