






















Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Sound	 Sound / Title
 Aspect	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 CH. List	 Smart / List
 EPG	 Guide / EPG / -/--
 FAV	 Fav / Marker / PC
 TV / Radio	 TV/Radio /
 Up	 Up
 Input	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home

Originale	Sostituto
 Down	 Down
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back / Return
 Info	 Info / Angle
 Vol +	 Vol+
 Rec	 Rec / Rec Mode
 Rec. List	 Display / Media





Originale	Sostituto
CH +	CH+ / Page+
Vol -	Vol-
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
Stop	Stop / Hold
CH -	CH- / Page-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
TV / TXT	Text / Goto
Cancel	Shift + Exit / Cancel / Clear
Reveal	Eject / Surround
Nicam / A2	Audio / Lang I/II
<< / Index	<< / Tune-
>> / Hold	>> / Tune+
I<< / Size	I<< / Preset-

Originale	Sostituto
>>I / Subpage	>>I / Preset+

