
 
 

 











 


 

 





 








Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Menu Off	 Exit
Mute	 Mute	Menu Down	 Down
Update	 Play	Volume+	 Vol +
Reveal	 Pause	Chan.Up	 Ch +
Txt Stop	 Stop	Volume-	 Vol -
Info	 Rec	Menu audio	 Dual
Subt.List	 Subt	Chan.Down	 Ch -
Sleep Timer	 Sleep	1	 1
Return TV	 TV/R	2	 2
Menu video	 D. Menu	3	 3
Txt Expand	 Eject	4	 4
TV/AV	 AV	5	 5
Menu	 Menu	6	 6
Menu Up	 Up	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide



Originale	Sostituto	Originale	Sostituto
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		

