



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	1		1		OK		OK
	2		2		Down		Down
	3		3		P-		CH- / Page-
	4		4		i		Info / Angle
	5		5		CL		D.Menu / Top
	6		6		Mute		Mute / Dimmer
	7		7		TXT		Text / Goto
	8		8		Red		Red / Netflix / Search
	9		9		Rec		Rec / Rec Mode
	0		0		Green		Green / APP / Repeat
	AV		AV / Input / RDS		Timer		Sleep / Timer
	Up		Up		Yellow		Yellow / YouTube / Repeat
	P+		CH+ / Page+		Picture		Picture / Format
	Right		Right		Blue		Blue / Prime Video / Random
	Vol+		Vol+		Sound		Sound / Title
	Left		Left		(I)-		Shift + CH- / Page-





	Originale	Sostituto		Originale	Sostituto
	(I)+	+	Shift + CH+ /		
	*-		I<< / Preset-		
	*+		>>I / Preset+		
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	Pause		Pause / Step / Freeze		
	Index + <<	+	Shift + << /		
	Index + >	+	Shift + >> /		
	Stop		Stop / Hold		

