


 

 
 
 
 
 




 

 




Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Originale	Sostituto	Originale	Sostituto
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-



 

 

 

 









 



 

 

 

 









Originale		Sostituto		Originale		Sostituto	
	Green / >>		>> / Tune+				
	Green / >>		Green / APP / Repeat				
	Yellow / I<<		I<< / Preset-				
	Yellow / I<<		Yellow / YouTube / Repeat				
	Blue / >>I		Blue / Prime Video / Random				
	Blue / >>I		>>I / Preset+				
	Text / Play/Pause		Text / Goto				
	Text / Play/Pause		Pause / Step / Freeze				
	Text / Play/Pause		Play / Slow				
	Stop / Still		Stop / Hold				
	Timer / Subtitle		Subtitle / EQ				
	Size / Aspect		Zoom / Size				
	Cancel [≡X]		Shift + Exit / Cancel / Clear				
	Radio		TV/Radio /				
	Audio / I/II		Audio / Lang I/II				
	Rec		Rec / Rec Mode				





Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Originale	Sostituto	Originale	Sostituto
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Originale	Sostituto
Green	Green / APP / Repeat
>>	>> / Tune+
Yellow	Yellow / YouTube / Repeat
I<<	I<< / Preset-
Blue	Blue / Prime Video / Random
>>I	>>I / Preset+
Play	Play / Slow
Pause	Pause / Step / Freeze
[=]	Text / Goto
Stop/Still	Stop / Hold
[=+]	Picture / Format
[=o]/Subtitle	Subtitle / EQ
[=♦]/[+]	Zoom / Size
[=x]	Setup / OPT /
Radio	TV/Radio /
Audio	Audio / Lang I/II
Rec	Rec / Rec Mode

Originale	Sostituto

