



 

 










Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Originale	Sostituto	Originale	Sostituto
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-









 

 

 

 

 

 

 

 

 





 
 

 



Originale	Sostituto
Green / >>	>> / Tune+
Green / >>	Green / APP / Repeat
Yellow /  <<	<< / Preset-
Yellow /  <<	Yellow / YouTube / Repeat
Blue / >>	Blue / Prime Video / Random
Blue / >>	>>  / Preset+
Text / Play/Pause	Text / Goto
Text / Play/Pause	Pause / Step / Freeze
Text / Play/Pause	Play / Slow
Stop / Still	Stop / Hold
Timer / Subtitle	Subtitle / EQ
Size / Aspect	Zoom / Size
Cancel [≡X]	Shift + Exit / Cancel / Clear
Radio	TV/Radio /
Audio / I/II	Audio / Lang I/II
Rec	Rec / Rec Mode



Originale	Sostituto







Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Originale	Sostituto	Originale	Sostituto
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-



