


 

 
 
 
 
 




 

 


 


Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Originale	Sostituto	Originale	Sostituto
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-





 

 

 

 









 



 

 

 

 







Originale	Sostituto
 Green / >>	 >> / Tune+
 Green / >>	 Green / APP / Repeat
 Yellow / I<<	 I<< / Preset-
 Yellow / I<<	 Yellow / YouTube / Repeat
 Blue / >>I	 Blue / Prime Video / Random
 Blue / >>I	 >>I / Preset+
 Text / Play/Pause	 Text / Goto
 Text / Play/Pause	 Pause / Step / Freeze
 Text / Play/Pause	 Play / Slow
 Stop / Still	 Stop / Hold
 Timer / Subtitle	 Subtitle / EQ
 Size / Aspect	 Zoom / Size
 Cancel [=X]	 Shift + Exit / Cancel / Clear
 Radio	 TV/Radio /
 Audio / I/II	 Audio / Lang I/II
 Rec	 Rec / Rec Mode

Originale	Sostituto





Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Originale	Sostituto	Originale	Sostituto
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





	Originale	Sostituto	Originale	Sostituto
	Green	 Green / APP / Repeat		
	>>	 >> / Tune+		
	Yellow	 Yellow / YouTube / Repeat		
	l<<	 l<< / Preset-		
	Blue	 Blue / Prime Video / Random		
	>>l	 >>l / Preset+		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	[≡]	 Text / Goto		
	Stop/Still	 Stop / Hold		
	[≡+]	 Picture / Format		
	[≡o]/Subtitle	 Subtitle / EQ		
	[≡♦]/[+]	 Zoom / Size		
	[≡x]	 Setup / OPT /		
	Radio	 TV/Radio /		
	Audio	 Audio / Lang I/II		
	Rec	 Rec / Rec Mode		

