


 

 
 



 
 






 


 

 
 
 
 
 


 




 
 
 


 
 






Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Prog/EPG	 Shift + TV/Radio / Program
 Open/Close	 Eject / Surround	 Title/TTX	 Text / Goto
 1	 1	 Title/TTX	 Sound / Title
 2	 2	 Vol+	 Vol+
 3	 3	 Goto	 Shift + Text /
 4	 4	 PBC	 Picture / Format
 5	 5	 Vol-	 Vol-
 6	 6	 Pause	 Pause / Step / Freeze
 7	 7	 Play	 Play / Slow
 8	 8	 Stop	 Stop / Hold
 10+	 Shift + Guide / EPG / -/-	 Setup	 Setup / OPT /
 9	 9	 Return	 Back / Return
 0	 0	 Source	 AV / Input / RDS
 Display	 Display / Media	 Tv/Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 Up	 Up
 Menu	 Menu / Home	 Down	 Down
 Prog/EPG	 Guide / EPG / -/-	 Enter	 OK

Originale	Sostituto	Originale	Sostituto
 Power	 Dimmer / Mute	 Shift	 Shift
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 TEXT
 HOME	 ANGLE	 MENU	 INFO
 OK	 OK	 OK	 OK
 CLEAR	 RETURN	 EXIT	 BACK
 CANCEL	 LIST	 VOL+	 CH PAGE+
 VOL-	 SMART	 MEDIA	 CH PAGE-
 TV	 DISPLAY	 DVD	 CD-8TB
 1	 1	 2	 2
 2	 TAPE	 3	 TUNER
 3	 AUX-HDD	 4	 4
 4	 USB	 5	 5
 5	 BLUETOOTH	 6	 6
 6	 HDMI-SAT	 7	 7
7	 PC	8	8
8	 FAV MARKER	9	9
9	GUIDE EPG	0	0
0	NETFLIX	APP	APP
GUIDE EPG	YouTube	Prime Video	Prime Video
NETFLIX	SEARCH	REPEAT	REPEAT A-B
APP	RANDOM	RANDOM	RANDOM
YouTube	Mandis SHOP	Mandis SHOP	Mandis SHOP
Prime Video	www.mandis.tv	www.mandis.tv	www.mandis.tv





Originale	Sostituto
<<	<< / Tune-
Right/FAV+	Right
>>	>> / Tune+
I<<	I<< / Preset-
Left/FAV-	Left
>>I	>>I / Preset+
3D	Shift + 3
Subtitle	Subtitle / EQ
Zoom	Zoom / Size
Mode	Smart / List
Digest	Fav / Marker / PC
Language	Audio / Lang I/II
P/N	Sleep / Timer
Repeat	Green / APP / Repeat
L/R	D.Menu / Top
A-B	Yellow / YouTube / Repeat
Angle	Info / Angle

Originale	Sostituto
Slow	Shift + Play /

