



Originale	Sostituto	Originale	Sostituto
Standby	Power	Picture	Format
Source	AV	DVD Setup / DVD Menu	D. Menu
1	1	CH +	Ch +
2	2	CH -	Ch -
3	3	Up	Up
4	4	Right	Right
5	5	Down	Down
6	6	Left	Left
7	7	Enter	Ok
8	8	LCD Menu	Menu
9	9	Mute	Mute
0	0	Eject / Auto	Shift + Exit
ZZZ	Shift + Power	Play / Pause	Play
Recall	Back	Play / Pause	Pause
Vol +	Vol +	Play / Pause	Shift + Pause
Vol -	Vol -	Stop / Exit	Stop
Audio	Shift + Subt	Stop / Exit	Exit

Originale	Sostituto	Originale	Sostituto
Standby	Power	Picture	Format
Source	AV	DVD Setup / DVD Menu	D. Menu
1	1	CH +	Ch +
2	2	CH -	Ch -
3	3	Up	Up
4	4	Right	Right
5	5	Down	Down
6	6	Left	Left
7	7	Enter	Ok
8	8	LCD Menu	Menu
9	9	Mute	Mute
0	0	Eject / Auto	Shift + Exit
ZZZ	Shift + Power	Play / Pause	Play
Recall	Back	Play / Pause	Pause
Vol +	Vol +	Play / Pause	Shift + Pause
Vol -	Vol -	Stop / Exit	Stop
Audio	Shift + Subt	Stop / Exit	Exit



