




 


 





























Originale	Sostituto
 STANDBY/ON	 Power
 OPEN/CLOSE	 Eject
 AUDIO	 Dual
 SUBTITLE	 Subt
 ANGLE	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DVD/USB	 Media
 CLEAR	 Exit

Originale	Sostituto
 TOP MENU	 Shift + Menu
 MENU	 Menu
 HOME MENU	 D. Menu
 RETURN	 Back
 UP	 Up
 DOWN	 Down
 RIGHT	 Right
 LEFT	 Left
 ENTER	 Ok
 << / < / <	 <<
 PLAY	 Play
 > / > / >>	 >>
 <<	 <<
 PAUSE	 Pause
 STOP	 Stop
 >>	 >>
 USB/REC	 Rec



