
 




Originale		Sostituto		Originale		Sostituto	
	POWER		Power		>/VOL +		Right
	MUTE		Mute		</VOL -		Left
	RED		Red		OK		Ok
	GREEN		Green		VOL +		Vol +
	YELLOW		Yellow		VOL -		Vol -
	BLUE		Blue		PAGE +		Ch +
	WHITE/INFO		Info		PAGE -		Ch -
	INFO/WHITE		Media		BROWSE		Options
	TV		Smart		FREEZE		Pause
	TV/RADIO		TV/R		1		1
	AUDIO		Dual		2		2
	EPG		Guide		3		3
	MENU		Menu		4		4
	EXIT		Exit		5		5
	RECALL		Pre Ch		6		6
	^ /CH +		Up		7		7
	V /CH -		Down		8		8





Originale		Sostituto		Originale		Sostituto	
9 WXYZ	9	9	9				
0	0	0	0				
TEXT.	TEXT	REPEAT TEXT	Text				
SUB	SUBTITLE	AD SUBT	Subt				

