




 






 




 

 
 








 


 



 



 
 



 





 
 
 
 











 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Originale	Sostituto	Originale	Sostituto
 Vol -	 Vol -	 Vol -	 Vol -
 CH +	 Ch +	 CH +	 Ch +
 CH -	 Ch -	 CH -	 Ch -
 Exit	 Exit	 EXIT	 Exit
 Red / USB Left	 Red	 Red / USB Left	 Red
 Red / USB Left	 Shift + Left	 Red / USB Left	 Shift + Left
 Green / USB	 Green	 Green / USB	 Green
 Green / USB	 Shift + Down	 Green / USB	 Shift + Down
 Yellow / USB Up	 Yellow	 Yellow / USB Up	 Yellow
 Yellow / USB Up	 Shift + Up	 Yellow / USB Up	 Shift + Up
 Blue / USB Right	 Blue	 Blue / USB Right	 Blue
 Blue / USB Right	 Shift + Right	 Blue / USB Right	 Shift + Right
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 Enter	 Ok	 ENTER	 Ok
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down




 

 
 

 
 
 
 
 

 
 


Originale	Sostituto
QV	Options
FAV	Pre Ch
Source	AV
Sleep	Sleep
Picture	Shift + Format
Sound	Shift + Dual
Display	Info
I/II / Top	Dual
FAV - / REV	<<
FAV + / FWD	>>
USR/CR / Text	Media
USR/CR / Text	Text
Play/Pause / Index	Play
Play/Pause / Index	Shift + Info
Play/Pause / Index	Pause
Stop / Cancel	Stop
Stop / Cancel	Shift + Exit

Originale	Sostituto
Size	Format
Prog / Mix	Smart
Prog / Mix	Shift + Sleep
Return / SUBPG	Back
Repeat / Reveal	Shift + Back
Search / Hold	TV/R





Originale	Sostituto	
		Power
		AV
		Exit
		Menu
		Dual
		Media
		Options
		Text
		TV/R
		1
		2
		3
		6
		5
		4
		7
		8

Originale	Sostituto	
		9
		0
		Guide
		Up
		Right
		Ok
		Left
		Down
		Subt
		Pause
		Rec
		<<
		Play
		>>
		Shift + Media
		Shift + Dual
		Shift + 6

