



Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info
 EPG	 Guide
 Menu	 Menu
 Exit	 Exit
 Up / CH +	 Up

Originale	Sostituto
 Up / CH +	 Ch +
 Down / CH -	 Down
 Down / CH -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 OK	 Ok
 PG +	 Shift + Ch +
 PG -	 Shift + Ch -
 TV / Radio	 TV/R
 SUB	 Subt
 TTX	 Text
 Audio	 Dual
 Last	 Back
 Mode	 Smart
 White / Favor	 Sleep





Originale		Sostituto		Originale		Sostituto	
FAVOR	White / Favor	FAV PRE-CH	Pre Ch				
	Red	A	Red				
	Green	B	Green				
	Yellow	C	Yellow				
	Blue	D	Blue				

