









 

 








 

 


 










 



 

 
 

 

















Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 More	 Display / Media
 ?	 Guide / EPG / -/--
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Zoom	 Zoom / Size
 0 / AV	 0
 0 / AV	 AV / Input / RDS

Originale	Sostituto
 OPT	 Setup / OPT /
 SFI	 Picture / Format
 TV / Radio	 TV/Radio /
 Genre	 Smart / List
 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Red	 Red / Netflix / Search
 Up	 Up
 Blue	 Blue / Prime Video / Random
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 <<	 << / Tune-













 

 

 


 
























 


 

 













Originale	Sostituto
	<b>HOLD</b> Stop / Hold
	<b>SLOW</b> Play / Slow
	<b>STEP-FREEZE</b> Pause / Step / Freeze
	<b>TUNE+</b> >> / Tune+
	<b>CH PAGE -</b> CH- / Page-
	<b>CH PAGE +</b> CH+ / Page+
	<b>VOL -</b> Vol-
	<b>VOL +</b> Vol+
	<b>GOTO TEXT</b> Text / Goto
	<b>SHIFT + STEP-FREEZE</b> Shift + Pause / Step /
	<b>TITLE SOUND</b> Sound / Title
	<b>TOP MENU D.MENU</b> D.Menu / Top
	<b>HOME MENU</b> Menu / Home
	<b>SHIFT + HDMI-BAT 0</b> Shift + 0

Originale	Sostituto








 




 
 



Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 More	 Display / Media
 ?	 Guide / EPG / -/--
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Zoom	 Zoom / Size
 0 / AV	 0
 0 / AV	 AV / Input / RDS

Originale	Sostituto
 OPT	 Setup / OPT /
 SFI	 Picture / Format
 TV / Radio	 TV/Radio /
 Genre	 Smart / List
 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Red	 Red / Netflix / Search
 Up	 Up
 Blue	 Blue / Prime Video / Random
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 <<	 << / Tune-











 

 

 








 








 










 



 

 
 

 













Originale	Sostituto
 Stop	 Stop / Hold
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Prog -	 CH- / Page-
 Prog +	 CH+ / Page+
 Volume -	 Vol-
 Volume +	 Vol+
 TXT	 Text / Goto
 Still	 Shift + Pause / Step /
 Sound	 Sound / Title
 PIP	 D.Menu / Top
 Menu	 Menu / Home
 HDMI	 Shift + 0

Originale	Sostituto





Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 More	 Display / Media
 ?	 Guide / EPG / -/--
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Zoom	 Zoom / Size
 0 / AV	 0
 0 / AV	 AV / Input / RDS

Originale	Sostituto
 OPT	 Setup / OPT /
 SFI	 Picture / Format
 TV / Radio	 TV/Radio /
 Genre	 Smart / List
 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Red	 Red / Netflix / Search
 Up	 Up
 Blue	 Blue / Prime Video / Random
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 <<	 << / Tune-





Originale		Sostituto		Originale		Sostituto	
	Stop		Stop / Hold				
	Play / Pause		Play / Slow				
	Play / Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Prog -		CH- / Page-				
	Prog +		CH+ / Page+				
	Volume -		Vol-				
	Volume +		Vol+				
	TXT		Text / Goto				
	Still		Shift + Pause / Step /				
	Sound		Sound / Title				
	PIP		D.Menu / Top				
	Menu		Menu / Home				
	HDMI		Shift + 0				

