



 






Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 SOS	 Sound / Title
 i / Info	 Info / Angle
 Up / CH +	 Up
 Up / CH +	 CH+ / Page+

Originale	Sostituto
 Down / CH -	 CH- / Page-
 Down / CH -	 Down
 Right / Vol +	 Vol+
 Right / Vol +	 Right
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK	 OK
 Menu	 Menu / Home
 EPG / Guide	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 USB - List	 Smart / List
 Page +	 Shift + CH+ /
 Image - Aspect Ratio	 Zoom / Size
 Page -	 Shift + CH- /
 USB - Media	 Display / Media
 GOTO	 Shift + Text /
 Image - HDMI RES	 Picture / Format





Originale		Sostituto		Originale		Sostituto	
	Rec		Rec / Rec Mode		Blue / Txt		Text / Goto
	Stop		Stop / Hold				
	Play / Pause		Play / Slow				
	Play / Pause		Pause / Step / Freeze				
	Timer		Shift + Sleep / Timer				
	Timer		Sleep / Timer				
	I<<		I<< / Preset-				
	<<		<< / Tune-				
	>>		>> / Tune+				
	>>I		>>I / Preset+				
	Red / Subt		Subtitle / EQ				
	Red / Subt		Red / Netflix / Search				
	Green / Lang		Audio / Lang I/II				
	Green / Lang		Green / APP / Repeat				
	Yellow / TV/Rad		TV/Radio /				
	Yellow / TV/Rad		Yellow / YouTube / Repeat				
	Blue / Txt		Blue / Prime Video / Random				

