

 



 

 

 



 



 

 



 



 


 






 

 

 

 

 

 


 



 

 



 








 
 

 
 
 


 

 


 







Originale		Sostituto		Originale		Sostituto	
	System Standby		Power		Left		Left
	Muting		Mute / Dimmer		Enter		OK
	Play		Play / Slow		Right		Right
	Pause		Pause / Step / Freeze		Down		Down
	Stop		Stop / Hold		Recall		Back / Return
	<<		<< / Tune-		Master Vol+		Vol+
	>>		>> / Tune+		Multi CH		Smart / List
	I<</CH Preset-Tuner		I<< / Preset-		Tv CH+		CH+ / Page+
	>>/CH Preset+ Tuner		>> / Preset+		Master Vol-		Vol-
	Sound Field Mode		Sound / Title		Tv CH-		CH- / Page-
	Sound Field		Audio / Lang I/II		1 Tuner		1
	Sleep		Sleep / Timer		2 Tuner		2
	Tv/Video/ANT		TV/Radio /		CD		3
	DVD Menu		D.Menu / Top		4 Tuner		4
	Standby AV		AV / Input / RDS		5 Tuner		5
	Main Menu		Menu / Home		Tuner		6
	Up		Up		7 Tuner		7





Originale	Sostituto
 8 Tuner	 8
 9 Tuner	 9
 0 Tuner	 0
 -	 Fav / Marker / PC
 Video1	 Red / Netflix / Search
 Video 2	 Green / APP / Repeat
  <</CH/Preset-	 Shift +  << / Preset-
 >> /CH/Preset+	 Shift + >>  / Preset+
 Sound Field	 Shift + Sound / Title
 Test Tone	 Shift + Audio / Lang I/II
 D.Skip/TV/VTR	 Shift + TV/Radio / Program
 Top Menu	 Shift + D.Menu / Top Menu
 +	 Shift + Up
 < Menu	 Shift + Left
 Enter/D.Tuning/Return Tuner	 Shift + OK
 Menu >	 Shift + Right
 Tv Vol+	 Shift + Vol+

Originale	Sostituto
 Tv Vol-	 Shift + Vol-
 DVD/LD	 Shift + 2
 3 Tuner	 Shift + 3
 MD/Tape	 Shift + 5
 6 Tuner	 Shift + 6
 >10 Tuner/Shift/---	 Shift + 0







 

 


 

 



 

 

 

 

 





 

 

 

 

Originale	Sostituto
 Standby	 Power
 Video 1	 Shift + 1
 Video 2	 Shift + 2
 DVD/LD	 TV/Radio /
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 >10/Shift/-/-	 Shift + 0

Originale	Sostituto
 0	 0
 Enter/D.Tuning/Return	 OK
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 D.Menu / Top
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-





Originale	Sostituto
 Standby CD	 Power
 Standby Video	 Shift + Power
 Video 1	 Shift + Smart / List
 Video 2	 Shift + Display / Media
 DVD/LD	 Shift + 2
 MD/Tape	 Shift + D.Menu / Top Menu
 CD	 TV/Radio /
 Tuner	 Text / Goto
 1 CD	 Shift + 1
 1 Video 1	 1
 2 CD	 Smart / List
 2 Video 1	 2
 3 CD	 Shift + 3
 3 Video 1	 3
 4 CD	 4
 4 Video 1	 Shift + 4
 5 CD	 5

 

 

 










 




 

 

 

 



 



 

 

 



 



 

 

 


 

 

 



Originale	Sostituto
 5 Video 1	 Shift + 5
 6 CD	 Shift + 6
 6 Video 1	 6
 7 CD	 7
 7 Video 1	 Shift + 7
 8 CD	 Shift + 8
 8 Video 1	 8
 9 CD	 Shift + 9
 9 Video 1	 9
 >10/Shift/-/CD	 Fav / Marker / PC
 >10/Shift/-/Video 1	 Shift + 0
 0 CD	 Guide / EPG / -/-
 0 Video 1	 0
 Enter/D.Tuning/Return CD	 Display / Media
 Enter/D.Tuning/Return Video 1	 OK
 I<< CD	 I<< / Preset-
 I<< Video 1	 Shift + I<< / Preset-









Originale		Sostituto		Originale		Sostituto	
	Standby		Power		5 Video 2		5
	Standby Video		Shift + Power		6 MD/Tape		6
	Video 1		Shift + 1		6 Video 2		Shift + 6
	Video 2		Shift + 2		7 MD/Tape		7
	DVD/LD		Display / Media		7 Video 2		Shift + 7
	MD/Tape		Smart / List		8 MD/Tape		Shift + 8
	CD		Setup / OPT /		8 Video 2		8
	Tuner		TV/Radio /		9 MD/Tape		Shift + 9
	1 MD/Tape		Shift + Smart / List		9 Video 2		9
	1 Video 2		1		>10/Shift/-/- MD/Tape		Guide / EPG / -/-
	2 MD/Tape		Shift + Display / Media		>10/Shift/-/- Video 2		Shift + 0
	2 Video 2		2		0 MD/Tape		Fav / Marker / PC
	3 MD/Tape		Shift + 3		0 Video 2		0
	3 Video 2		3		Enter/D.Tuning/Return MD/Tape		Shift + OK
	4 MD/Tape		4		Enter/D.Tuning/Return Video 2		OK
	4 Video 2		Shift + 4		I<< MD/Tape		I<< / Preset-
	5 MD/Tape		Shift + 5		I<< Video 2		Shift + I<< / Preset-





