

 
 




 










 

 



 

 

 




 







Originale	Sostituto
 VHS Power	 Power
 Audio	 Dual
 TV Power	 Shift + Power
 TV AV	 Shift + AV
 TV CH +	 Shift + Ch +
 TV CH -	 Shift + Ch -
 TV Volume +	 Vol +
 TV Volume -	 Vol -
 Operation Select VHS	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 0	 0
 -/-- / ≥ 10	 Guide
 Cancel / Reset	 Exit
 CH + / Tracking/V-Lock +	 Ch +
 CH - / Tracking/V-Lock -	 Ch -
 Input	 Media
 Repeat	 Text
 I<< Index/Skip	 I<<
 >>I Index/Skip	 >>I
 << REW	 <<
 >> FF	 >>
 Stop	 Stop
 Pause / Slow	 Pause
 Play	 Play
 Menu / Play List	 Menu
 Menu / Play List	 List




 
 




 




 
 
 
Originale	Sostituto
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Return / Exit	Back
Prog / Check	Shift + Sleep
i-Timer	Sleep
Prog Play / Play Mode	Shift + Right
<< JET REW /	Options
Timer	AV
DVD-RAM	Format
Rec Mode	Shift + Rec
Rec	Rec
VHS Status	Info
A / Cinema	Red
B / Off Timer	Green

Originale	Sostituto
Ext Link	3D





Originale	Sostituto
 DVD Power	 Power
 Audio	 Dual
 TV Power	 Shift + Power
 TV AV	 Shift + AV
 TV CH +	 Shift + Ch +
 TV CH -	 Shift + Ch -
 TV Volume +	 Vol +
 TV Volume -	 Vol -
 Operation Select DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 0	 0
 -/-- / ≥10	 Guide
 Cancel / Reset	 Exit
 Repeat	 Text
 I<< Index/Skip	 I<<
 >>I Index/Skip	 >>I
 << REW	 <<
 >> FF	 >>
 Stop	 Stop
 Pause / Slow	 Pause
 Play	 Play
 Direct Navigator / Top Menu	 Shift + Menu
 Direct Navigator / Top Menu	 D. Menu
 Menu / Play List	 Menu
 Up	 Up
 Left	 Left



