 







 

 

 



 

 

 

 

 





 



 








| Originale | Sostituto |
|--|---|
|  Power |  Power |
|  i |  ANGLE INFO |
|  INPUT SELECT |  RDS AV INPUT |
|  PICTURE SIZE |  FORMAT PICTURE |
|  1 |  TV 1 |
|  2 |  DVD 2 |
|  3 |  CD - STB 3 |
|  4 |  VIDEO 4 |
|  5 |  TAPE 5 |
|  6 |  TUNER 6 |
|  7 |  AUX - HDD 7 |
|  8 |  USB 8 |
|  9 |  BLUETOOTH 9 |
|  AUDIO I/II |  LANG I/II AUDIO |
|  0 |  HDMI - BAT 0 |
|  GUIDE EPG |  GUIDE EPG |
|  MENU |  HOME MENU |

| Originale | Sostituto |
|--|---|
|  Up |  Up |
|  RETURN |  RETURN BACK |
|  Left |  Left |
|  ENTER/ CH LIST |  SHIFT + OK |
|  ENTER/ CH LIST |  OK |
|  Right |  Right |
|  Mute |  DIMMER MUTE |
|  Down |  Down |
|  Subtitle |  EQ SUBTITLE |
|  Vol + |  VOL + |
|  FREEZE |  STEP - FREEZE |
|  P + |  CH PAGE + |
|  Vol - |  VOL - |
|  P ↔ P |  SHIFT + RETURN BACK |
|  P - |  CH PAGE - |
|  [≡] |  GOTO TEXT |
|  [≡?] |  SHIFT + ANGLE INFO |





| Originale | Sostituto |
|--------------|---------------------------------------|
| [≡⇕] | SHIFT + GOTO TEXT Shift + Text / |
| TV | PROGRAM TV/RADIO TV/Radio / |
| Play / Pause | SHIFT + SLOW Shift + Play / |
| Play / Pause | SLOW Play / Slow |
| Stop | HOLD Stop / Hold |
| USB | SHIFT + USB 8 Shift + 8 |
| Rec | REC MODE Rec / Rec Mode |
| I<< / Red | SHIFT + PRESET- Shift + I<< / Preset- |
| I<< / Red | PRESET- I<< / Preset- |
| << / Green | TUNE- << / Tune- |
| << / Green | SHIFT + TUNE- Shift + << / |
| >> / Yellow | TUNE+ >> / Tune+ |
| >> / Yellow | SHIFT + TUNE+ Shift + >> / |
| >>I / Blue | SHIFT + PRESET+ Shift + >>I / Preset+ |
| >>I / Blue | PRESET+ >>I / Preset+ |
| | |
| | |

| Originale | Sostituto |
|-----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

