




 
| Originale  | Sostituto  |
|--|--|
|  Mute       |  Mute / Dimmer            |
|  Power      |  Power                    |
|  1          |  1                        |
|  2          |  2                        |
|  3          |  3                        |
|  4          |  4                        |
|  5          |  5                        |
|  6          |  6                        |
|  7          |  7                        |
|  8          |  8                        |
|  9          |  9                        |
|  REC      |  Rec / Rec Mode         |
|  0 / AV   |  0                      |
|  0 / AV   |  AV / Input / RDS       |
|  OPT      |  Setup / OPT /          |
|  Red / << |  << / Tune-             |
|  Red / << |  Red / Netflix / Search |

| Originale  | Sostituto   |
|--|---|
|  Green / Stop                         |  Stop / Hold                 |
|  Green / Stop                         |  Green / APP / Repeat        |
|  Yellow / Play / Slow                 |  Play / Slow                 |
|  Yellow / Play / Slow                 |  Yellow / YouTube / Repeat   |
|  Blue / Aspect / Picture              |  Picture / Format            |
|  Blue / Aspect / Prime Video / Random |  Blue / Prime Video / Random |
|  Blue / Aspect / Tune+                |  >> / Tune+                  |
|  Up                                   |  Up                          |
|  Left                                 |  Left                        |
|  OK                                   |  OK                          |
|  Right                                |  Right                       |
|  Down                               |  Down                      |
|  SFI / EPG                          |  Guide / EPG / -/-         |
|  Exit / Recall                      |  Exit / Cancel / Clear     |
|  Exit / Recall                      |  Back / Return             |
|  Info                               |  Info / Angle              |
|  Prog +                             |  CH+ / Page+               |







 
| Originale  | Sostituto  |
|--|--|
|  Mute       |  Mute / Dimmer            |
|  Power      |  Power                    |
|  1          |  1                        |
|  2          |  2                        |
|  3          |  3                        |
|  4          |  4                        |
|  5          |  5                        |
|  6          |  6                        |
|  7          |  7                        |
|  8          |  8                        |
|  9          |  9                       |
|  REC      |  Rec / Rec Mode         |
|  0 / AV   |  AV / Input / RDS       |
|  0 / AV   |  0                      |
|  OPT      |  Setup / OPT /          |
|  Red / << |  << / Tune-             |
|  Red / << |  Red / Netflix / Search |

| Originale   | Sostituto   |
|---|---|
|  Green / Stop    |  Green / APP / Repeat        |
|  Green / Stop    |  Stop / Hold                 |
|  Yellow /        |  Play / Slow                 |
|  Yellow /        |  Yellow / YouTube / Repeat   |
|  Blue / >> /     |  >> / Tune+                  |
|  Blue / >> /     |  Picture / Format            |
|  Blue / >> /     |  Blue / Prime Video / Random |
|  Up              |  Up                          |
|  Left            |  Left                        |
|  OK              |  OK                          |
|  Right           |  Right                      |
|  Down          |  Down                      |
|  SFI / EPG     |  Guide / EPG / -/-         |
|  Exit / Recall |  Exit / Cancel / Clear     |
|  Exit / Recall |  Back / Return             |
|  Info          |  Info / Angle              |
|  Prog +        |  CH+ / Page+               |







| Originale  | Sostituto  |
|--|--|
|  Mute       |  Mute / Dimmer            |
|  Power      |  Power                    |
|  1          |  1                        |
|  2          |  2                        |
|  3          |  3                        |
|  4          |  4                        |
|  5          |  5                        |
|  6          |  6                        |
|  7          |  7                        |
|  8          |  8                        |
|  9          |  9                        |
|  REC      |  Rec / Rec Mode         |
|  0 / AV   |  AV / Input / RDS       |
|  0 / AV   |  0                      |
|  OPT      |  Setup / OPT /          |
|  Red / << |  Red / Netflix / Search |
|  Red / << |  << / Tune-             |

| Originale   | Sostituto   |
|---|---|
|  Green / Stop    |  Green / APP / Repeat        |
|  Green / Stop    |  Stop / Hold                 |
|  Yellow /        |  Play / Slow                 |
|  Yellow /        |  Yellow / YouTube / Repeat   |
|  Blue / >> /     |  Blue / Prime Video / Random |
|  Blue / >> /     |  Picture / Format            |
|  Blue / >> /     |  >> / Tune+                  |
|  Up              |  Up                          |
|  Left            |  Left                        |
|  OK              |  OK                          |
|  Right           |  Right                       |
|  Down          |  Down                      |
|  SFI / EPG     |  Guide / EPG / -/-         |
|  Exit / Recall |  Exit / Cancel / Clear     |
|  Exit / Recall |  Back / Return             |
|  Info          |  Info / Angle              |
|  Prog +        |  CH+ / Page+               |



