 





 





















 










 



 



 



 



 

 

 


 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol-	 Vol-
 Tv/AV	 AV / Input / RDS	 Zoom	 Zoom / Size
 1	 1	 P-	 CH- / Page-
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK/Select	 OK
 5	 5	 Right	 Right
 6	 6	 Menu	 Menu / Home
 7	 7	 Down	 Down
 8	 8	 Mute	 Mute / Dimmer
 9	 9	 Red / Picture	 Red / Netflix / Search
 0	 Shift + Guide / EPG / -/--	 Red / Picture	 Picture / Format
 Back	 0	 Green / Sound	 Green / APP / Repeat
 Vol+	 Back / Return	 Green / Sound	 Sound / Title
 Scan	 Vol+	 Yellow / Sleep	 Yellow / YouTube / Repeat
 P+	 Smart / List	 Yellow / Sleep	 Sleep / Timer
	 CH+ / Page+	 Blue / Call	 Blue / Prime Video / Random

Originale	Sostituto	Originale	Sostituto
 Power	 Mute / Dimmer	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 Play	 PAUSE	 PRESET-	 PRESET+
 TUNE-	 TUNE+	 EQ	 SURROUND
 TITLE	 LANG UII	 SUBTITLE	 PROGRAM
 SOUND	 ZOOM	 SLEEP	 TV RADIO
 FORMAT	 OPT-TOOLS	 GOTO	 RDS
 PICTURE	 SETUP	 TEXT	 AV INPUT
 TOP MENU	 HOME	 ANGLE	 INFO
 D.MENU	 MENU	 OK	 RETURN
 EXIT	 CLEAR	 BACK	 BACK
 VOL+	 LIST	 SMART	 CH PAGE
 VOL-	 MEDIA	 DISPLAY	 TV
 TV	 DVD	 CD - STB	 DVD
 1	 TAPE	 TUNER	 VIDEO
 2	 USB	 BLUETOOTH	 Mandis
 3	 AUX - HDD	 USB	 AUX - HDD
 4	 HDMI - BAT	 PC	 VIDEO
5	GUIDE EPG	FAV MARKER	TAPE
6	NETFLIX	APP	HDMI - BAT
7	REPEAT	REPEAT A-B	USB
8	SEARCH	RANDOM	AUX - HDD
9	REPEAT	RANDOM	HDMI - BAT
0	REPEAT A-B	RANDOM	BLUETOOTH
DVB MENU	FREEZE	III	USB
DVB	 Mandis SHOP	 www.mandis.tv	HDMI - BAT



