



Originale	Sostituto
 Vol +	 Vol+
 P+	 CH+ / Page+
 Vol -	 Vol-
 Power	 Power
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 PP	 Back / Return
 PP	 Fav / Marker / PC

Originale	Sostituto
 0	 0
 Display [ + ]	 Display / Media
 [≡]	 Text / Goto
 □	 Stop / Hold
 ?	 Smart / List
 ↕	 Zoom / Size
 - / ψ	 I<< / Preset-
 - / ψ	 Left
 Menu	 Menu / Home
 Menu	 OK
 + / >>I	 >>I / Preset+
 + / >>I	 Right
 ◇◇ / I-II	 Audio / Lang I/II
 ◇◇ / I-II	 Setup / OPT /

