



Originale		Sostituto		Originale		Sostituto	
	Vol +		Vol+		0		0
	P+		CH+ / Page+		Display [ + ]		Display / Media
	Vol -		Vol-		[≡]		Text / Goto
	Power		Power		□		Stop / Hold
	P-		CH- / Page-		?		Smart / List
	Mute		Mute / Dimmer		↕		Zoom / Size
	1		1		- / ψ		I<< / Preset-
	2		2		- / ψ		Left
	3		3		Menu		Menu / Home
	4		4		Menu		OK
	5		5		+ / >>I		>>I / Preset+
	6		6		+ / >>I		Right
	7		7		◇◇ / I-II		Audio / Lang I/II
	8		8		◇◇ / I-II		Setup / OPT /
	9		9				
	PP		Back / Return				
	PP		Fav / Marker / PC				

