



Originale	Sostituto
	Vol+
	CH+ / Page+
	Vol-
	Power
	CH- / Page-
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Back / Return
	Fav / Marker / PC

Originale	Sostituto
	0
	Display / Media
	Text / Goto
	Stop / Hold
	Smart / List
	Zoom / Size
	I<< / Preset-
	Left
	Menu / Home
	OK
	>>I / Preset+
	Right
	Audio / Lang I/II
	Setup / OPT /

