





Originale	Sostituto
 On / Off	 Power
 Mute All	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 CD-DVD	 Shift + 3
 FM-AM	 Shift + 6
 AUX	 Shift + 7
 TV	 Shift + 1
 CBL-SAT	 Shift + 0
 VCR	 Shift + 4
 Up / Tune +	 Up
 DVD Menu	 D.Menu / Top
 Settings	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Guide	 Guide / EPG / -/--
 System	 Menu / Home

Originale	Sostituto
 Down / Tune -	 Down
 Exit	 Exit / Cancel / Clear
 Track/Chap./CH +	 CH+ / Page+
 Volume +	 Vol+
 Track/Chap./CH -	 CH- / Page-
 Volume -	 Vol-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<< / Seek -	 I<< / Preset-
 I<< / Seek -	 << / Tune-
 >>I / Seek +	 >> / Tune+
 >>I / Seek +	 >>I / Preset+
 Shuffle / Presets <--	 Red / Netflix / Search
 Repeat / Presets -->	 Blue / Prime Video / Random
 1	 1
 2	 2





Originale

Sostituto

Originale

Sostituto

3	3	CD - STB 3	3		
4	4	VIDEO 4	4		
5	5	TAPE 5	5		
6	6	TUNER 6	6		
7	7	AUX - HDD 7	7		
8	8	USB 8	8		
9	9	BLUETOOTH 9	9		
0	0	HDMI - SAT 0	0		
Info	Info	ANGLE INFO	Info / Angle		

