



 
 
 






 

 


 

 


 




 



 
 

 





 


 
 
 
Originale	Sostituto
 Power	 Power
 TV/R	 TV/R
 Mute	 Mute
 Display	 Shift + Info
 Mode	 Options
 Time	 AV
 F1	 Shift + 1
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 Sleep	 Sleep
 USB	 Media
 Red / Audio	 Red
 Red / Audio	 Dual
 Green / Pause	 Green
 Green / Pause	 Shift + Pause
 Yellow / Zoom	 Yellow
 Yellow / Zoom	 Eject
 Blue / Info	 Blue
 Blue / Info	 Info
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down





Originale	Sostituto	Originale	Sostituto
	Vol+		Vol +
	Vol-		Vol -
	SAT		Smart
	CH+		Ch +
	CH-		Ch -
	Recall		Back
	FAV		Pre Ch
	SUB		Subt
	Find		3D
	EPG		Guide
	TXT		Text
	Page+		Shift +
	Page-		Ch +
	F2		Shift + 2
	F3		Shift + 3
	F4		Shift + 4
	F5		Shift + 5

Originale	Sostituto	Originale	Sostituto
	<<		<<
	>>		>>
	Play		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Pause		Pause
	Rec		Rec

