 





 
 


 




 



 


 






 
 



 


 
 


 
 

 

 

 
 

 

 
 



 
 
 
 
 









Originale		Sostituto		Originale		Sostituto	
	On		Power		Left		Left
	Off		Shift + Power		1		1
	Vol+		Vol +		2		2
	Vol-		Vol -		3		3
	Mute		Mute		4		4
	Test		Smart		5		5
	Night		Exit		6		6
	[≡]		Text		7		7
	Sleep		Sleep		8		8
	Surr.		Dual		9		9
	SPKR/Menu		Menu		0		0
	Delay/Normal		Info		Tun-M/[≡+]		Shift + Guide
	CH./[≡?]		TV/R		Mem/[≡◇]		Pre Ch
	Digital/[≡X]		Media		Tuning ▲		Ch +
	Up		Up		Tuning ▼		Ch -
	Down		Down		Direct/Green		Green
	Right		Right		Clear/Yellow		Yellow





Originale		Sostituto	
	Preset ▲		Shift + Ch +
	Preset ▼		Shift + Ch -
	OSD		Back
	RDS/D.Skip		Options
	Set		Ok
	Red		Red
	Blue		Blue
	DVD		Shift + 2
	AVR		Shift + 1
	CD		Shift + 3
	Tape		Shift + 4
	VID1/VCR		Shift + 5
	VID2/TV		Shift + 6
	VID3/CBL/SAT		Shift + 7
	VID4		Shift + 8
	AM/FM		Shift + 9
	6 CH.		Guide

Originale		Sostituto	
	> DVD		Play
	<< DVD		<<
	>> DVD		>>
	Stop DVD		Stop
	Pause DVD		Pause
	I<</Skip Down		I<<
	Skip Up/>>I		>>I


 



 



 




Originale		Sostituto		Originale		Sostituto	
	Power On		Power		3		3
	Power Off	+	Shift + Power		4		4
	Night		Exit		5		5
	[≡]		Text		6		6
	Vol+		Vol +		7		7
	Vol-		Vol -		8		8
	SPKR/Menu		Menu		9		9
	CH./[≡?]		TV/R		0		0
	Digital/[≡X]		Media		Tun-M/[≡+]		Guide
	Delay/Normal		Info		Mem/[≡◇]		Pre Ch
	Up		Up		Direct		Smart
	Down		Down		Clear	+	Shift + Exit
	Right		Right		Preset ▲		Ch +
	Left		Left		Preset ▼		Ch -
	Set		Ok		RDS/D.Skip		Options
	1		1		>>		>>
	2		2		<<		<<

 








 
 

 




 


 


 
 
 

 

 

 



 
 


 














 

 















	Originale	Sostituto	Originale	Sostituto
	Play	 PLAY MODE		
	Stop			
	Pause			
	>>			
	<<			





Originale		Sostituto		Originale		Sostituto	
	Power On		Power		Preset ▲/Blue		Ch +
	Power Off		Shift + Power		RDS/D.Skip		Options
	SPKR/Menu		Menu		>>		>>
	Delay/Normal		Info		<<		<<
	1		1		Play		Play
	2		2		Stop		Stop
	3		3		Pause		Pause
	4		4		>>		>>
	5		5		<<		<<
	6		6		Power (On /Off)		Media
	7		7		PR+ VCR		Shift + Ch +
	8		8		PR- VCR		Ch -
	9		9		Vol+ VCR		Vol +
	0		0		Vol- VCR		Vol -
	Tun-M/[≡+]		Guide		Input VCR		AV
	Mem/[≡◆]		Pre Ch		1 VCR		Shift + 1
	Direct		Smart		2 VCR		Shift + 2





	Originale	Sostituto	
	3 VCR	+	Shift + 3
	4 VCR	+	Shift + 4
	5 VCR	+	Shift + 5
	6 VCR	+	Shift + 6
	7 VCR	+	Shift + 7
	8 VCR	+	Shift + 8
	9 VCR	+	Shift + 9
	0 VCR	+	Shift + 0
	Clear VCR		Exit
	Play VCR		Red
	Stop VCR		Green
	Rec VCR		Rec
	>> VCR		Blue
	<< VCR		Yellow

Originale	Sostituto





	Originale	Sostituto	Originale	Sostituto
	<>	 Play		
	>>	 >>		
	<<	 <<		
	Stop	 Stop		
	Rec	 Rec		

