



Originale	Sostituto	Originale	Sostituto
Power	Power	Vol+	Vol +
Mute	Mute	Vol-	Vol -
Sleep	Sleep	Left	Left
Nicam/A2	Dual	Enter	Ok
Still	Pause	1	1
16:9	Format	2	2
NR.	Options	3	3
Surround	List	4	4
Picture	Shift + Format	5	5
Tv/Av	AV	6	6
Display	Info	7	7
Sound	Shift + Dual	8	8
Up	Up	9	9
CH+	Ch +	0	0
CH-	Ch -	-/--	Guide
Down	Down	Recall	Pre Ch
Right	Right	Red	Red

Originale	Sostituto	Originale	Sostituto
Vol+	Vol +	Vol-	Vol -
Left	Left	Enter	Ok
1	1	2	2
2	2	3	3
3	3	4	4
4	4	5	5
5	5	6	6
6	6	7	7
7	7	8	8
8	8	9	9
9	9	0	0
0	0	-/--	Guide
-/--	Guide	Recall	Pre Ch
Recall	Pre Ch	Red	Red
Red	Red		



