



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Sleep	 Sleep
 Mute	 Mute	 Display	 Info
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 Ok
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Aspect	 Format
 9	 9	 Source	 AV
 0	 0	 P.Mode	 Shift + Format
 -/--	 Guide	 S.Mode	 Shift + Dual
 Recall	 Back	 Exit	 Exit
 Vol+	 Vol +	 Menu	 Menu
 Vol-	 Vol -	 Media	 Media
 Nicam	 Dual	 Play / Pause	 Play





Originale		Sostituto	
	Play / Pause		Pause
	I<<		I<<
	>>I		>>I
	Rec		Rec
	Stop / Hold		Stop
	<< / Index		<<
	>> / Size		>>
	Text		Text
	FAV		Pre Ch
	FAV-		Shift + Down
	FAV+		Shift + Up
	Reveal		Smart
	Cancel		Shift + Exit
	Subpage		Shift + Subt
	Subtitle		Subt
	Red / TV/Radio		Red
	Green		Green

Originale		Sostituto	
	Yellow		Yellow
	Blue		Blue

