



Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok

Originale	Sostituto
 OK	 Shift + Ok
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Page-	 Shift + Ch -
 Page+	 Shift + Ch +
 FAV	 Pre Ch
 Guide	 Guide
 i	 Info
 NTSC / PAL	 Smart
 Pause	 Pause
 Audio	 Dual
 Radio	 TV/R
 Audio LR	 Options





Originale		Sostituto	
	Red / F1		Red
	Green / F2		Green
	Yellow / F3		Yellow
	Blue / F4		Blue
	Last		Back
	Text		Text

Originale		Sostituto	

