



Originale	Sostituto
	 Mute / Dimmer
	 Up
	 Power
	 Left
	 OK
	 Right
	 Menu / Home
	 Down
	 Info / Angle
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8

Originale	Sostituto
	 9
	 Smart / List
	 0
	 CH+ / Page+
	 Back / Return
	 Vol-
	 Vol+
	 CH- / Page-
	 Shift + Back / Return
	 TV/Radio /
	 Fav / Marker / PC
	 AV / Input / RDS
	 Shift + CH+ /
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Shift + CH- /
	 Yellow / YouTube / Repeat





Originale		Sostituto	
	Blue		Blue / Prime Video / Random
	Screen		Picture / Format
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Sleep		Sleep / Timer
	[ ≡ ]		Text / Goto
	[ ≡ X ]		Exit / Cancel / Clear
	EPG		Guide / EPG / -/--
	[ ■ ] [ ■ ■ ]		Display / Media

Originale		Sostituto	

