




 
















































Originale	Sostituto
 Power	 Power
 OSD	 Display / Media
 Open / Close	 Eject / Surround
 N/P	 Picture / Format
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 RAN	 Smart / List
 L/R	 D.Menu / Top
 Slow	 Shift + Play /
 Resume	 Shift + Right
 Step	 Shift + Pause / Step /
 Key+	 CH+ / Page+
 Return	 Back / Return
 3D	 Shift + 3
 Vol+	 Vol+
 Key-	 CH- / Page-
 Time	 Sleep / Timer

Originale	Sostituto
 PDVD	 AV / Input / RDS
 Vol-	 Vol-
 Language	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Prog	 TV/Radio /
 Setup	 Setup / OPT /
 Up	 Up
 Title	 Sound / Title
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Zoom	 Zoom / Size
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze





Originale	Sostituto
 Stop	 Stop / Hold
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 I<< Prev	 I<< / Preset-
 4	 4
 5	 5
 6	 6
 >>I Next	 >>I / Preset+
 7	 7
 8	 8
 9	 9
 << REV	 << / Tune-
 10/0	 0
 10+	 Guide / EPG / -/--
 Clear	 Exit / Cancel / Clear

Originale	Sostituto
 >> FWD	 >> / Tune+

