



 

 


 



Originale	Sostituto
Power	Power
Open / Close	Eject
HDD	Media
DVD	Smart
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Audio	Dual
Subtitle	Subt
Prog+	Ch +

Originale	Sostituto
Prog-	Ch -
Input Select	AV
TV / DVD	TV/R
Top Menu	Shift + Menu
Menu	Menu
System Menu	D. Menu
Chapter Mark	Guide
Mark Erase	Pre Ch
Title List	List
Timer	Sleep
Display	Info
Timer List	Mute
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down





Originale	Sostituto
 Return	 Back
 Options	 Options
 I<<	 I<<
 >>I	 >>I
 ⏏	 Vol -
 ⏪ ⏩	 Vol +
 << / <II / <I	 <<
 Play	 Play
 >> / I> / II>	 >>
 Time / Text	 Text
 Pause	 Pause
 Stop	 Stop
 Rec	 Rec
 Rec Stop	 Shift + Stop
 Rec Mode	 Shift + Rec
 Synchro Rec	 Red
 TV Power	 Shift + Power

Originale	Sostituto
 TV Input	 Shift + AV
 TV Prog+	 Shift + Ch +
 TV Vol+	 Shift + Vol +
 TV Vol-	 Shift + Vol -
 TV Prog-	 Shift + Ch -

