




 
 
 

 

 




 

 

 
 

 
 
 


 
 



 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 i	 Info
 AV	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Originale	Sostituto
 Blue	 Blue
 TV / DTV	 Smart
 Menu	 Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Guide	 Guide
 Back	 Back
 P-	 Ch -
 P+	 Ch +
 Vol+	 Vol +
 Vol-	 Vol -
 I/II	 Dual
 OO	 Shift + Dual
 TV / Radio	 TV/R





	Originale	Sostituto	Originale	Sostituto
	Colour System	OPT		Options
	Sleep Timer	PROG SLEEP		Sleep
	[...]	AD SUBT		Subt
	Zoom	ZOOM		Eject
	[≡]	REPEAT TEXT		Text
	[≡i]	DISC NAV LIST		List
	[?]	E-MANUAL D.MENU		D. Menu
	[↕]	PICTURE FORMAT		Format
	[⊖]	SHIFT + AD SUBT		Shift + Subt





Originale		Sostituto		Originale		Sostituto	
	Power		Power				
	Menu		Menu				
	Back		Back				
	OK		Ok				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	<<		<<				
	Play		Play				
	>>		>>				
	Stop		Stop				
	Pause		Pause				
	Rec / Top Menu		Rec				
	↑		Ch +				
	↓		Ch -				





Originale	Sostituto	Originale	Sostituto
 Power	 Power		
 <<	 <<		
 Play	 Play		
 >>	 >>		
 Rec	 Rec		
 Pause	 Pause		
 Stop	 Stop		
 Up	 Ch +		
 Down	 Ch -		

