




 

 
 

 



 









 
 
 




Originale	Sostituto
 Standby	 Power
 DTV/VCR	 AV
 Mute	 Mute
 Info	 Info
 Play	 Play
 Pause	 Pause
 Menu	 Menu
 Exit	 Exit
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 Rec List	 List
 Favorite	 Pre Ch
 Game	 Smart
 Recall	 Back
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/Radio	 TV/R
 Audio	 Dual
 Subtitle	 Subt



