



Originale		Sostituto		Originale		Sostituto	
	Power		Power		2		Shift + + / Play
	e		Vol - / Page -		3		Shift + Volt / Focus
	Aspect Ratio		Eco / Aspect		4		Shift + Vol - / Page -
	Freeze		Freeze / Timer		5		Shift + - / Stop
	Hide		3D / Invert		6		Shift + Help / Info
	Zoom		+ / Play		7		Shift + Eco / Aspect
	ReSync		Help / Info		8		Shift + 3D / Invert
	Source		Source		9		Shift + Blank / Mute
	Keystone Up		Shift + Up		0		Shift + Freeze / Timer
	Up		Up		VGA		Shift + Mode
	Keystone Down		Shift + Down		Component		Comp / Video
	Down		Down		Video		Shift + Comp / Video
	Left		Left		S-Video		Shift + Auto
	Right		Right		HDMI		Mode
	Menu		Menu		Wireless		Auto
	Menu		Enter		Mute		Blank / Mute
	1		Shift + Vol + / Page +				

